


# Petainer Keg




## Use and disposal S and D-Systems (well type fittings)

### S and D-Systems - Instructions for use

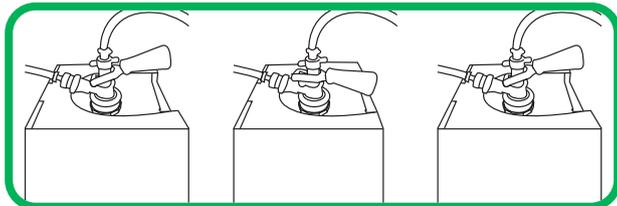

- 1 Open the carton.
- 2 Break and remove the snap cap.
- 3 Push the dispense head into the fitting on top of the keg.
- 4 Hold the keg fitting with one hand, and turn the dispense head with the other hand until it stops.
- 5 Push down the dispense head handle. The keg is now ready to dispense.
- 6 If there are problems (such as too much foaming) during dispense, wrap a towel or similar around the fitting and dispense head. Lift the dispense head handle, turn the dispense head counter-clockwise, and gently remove the dispense head from the keg (the automatic pressure relief valve is now open). Change the dispense head gasket. Then proceed from step 3, above.

### S and D-Systems - Instructions for disposal

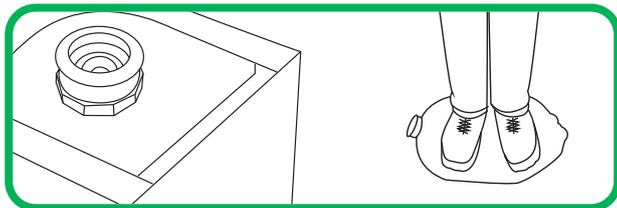

- 1 When the keg is empty, pull the dispense head handle upward.
- 2 Turn the dispense head counter-clockwise and gently remove the dispense head from the keg. The gas in the keg will be evacuated through the automatic pressure relief valve.
- 3 When fully depressurised, flatten the Petainer Keg and send for recycling in accordance with local PET recycling rules and regulations.
- 4 The cardboard carton can also be crushed or folded and sent for recycling.

## Caution

The Petainer Keg internal pressure should not exceed 3 bar.  
The Petainer Keg can burst when damaged by sharp objects.



If cleaning of the dispense line is required, or there is a need to uncouple the Petainer Keg for any reason before the keg is empty:

- 1 Put the keg in an upright position.
- 2 Put a towel or similar around the fitting and dispense head.
- 3 Pull the dispense head handle upward.
- 4 Turn the dispense head counter-clockwise and gently remove it from the keg to release the pressure in the keg through the automatic pressure relief valve.

- 5 Keep the keg upright and cover the "open" fitting.
- 6 Reconnect as quickly as possible.

### To reconnect the keg:

- 1 Push the dispense head into the fitting on top of the keg.
- 2 Hold the keg fitting with one hand, and turn the dispense head with the other hand until it stops.
- 3 Hold the dispense head with one hand and push down the dispense head handle with the other hand. The keg is again ready to dispense.